

# CHILD CHECKMATE

## INSTRUCTIONS

### TO ACTIVATE THE SYSTEM:

1. WHEN YOU START THE ENGINE, A BEEPER WILL SOUND FOR 3-5 SECONDS, THIS MEANS THE SYSTEM IS ON STAND-BY
2. OPENING THE FRONT ENTRANCE DOOR WILL ACTIVATE THE SYSTEM

### TO DE-ACTIVATE THE SYSTEM:

1. WHEN YOU TURN THE ENGINE OFF, A CONTINUOUS BEEPING WILL BE HEARD (AFTER 30 SECONDS, THE HORN WILL SOUND)
2. ENSURE THE FRONT ENTRANCE DOOR IS CLOSED
3. TURN IGNITION KEY TO ACCESSORY POSITION
4. WALK TO THE REAR OF THE BUS TO ENSURE NO ONE IS LEFT ON THE BUS
5. PRESS THE RED BUTTON (UPPER RIGHT HAND SIDE FACING REAR DOOR) AND HOLD FOR A FEW SECONDS (UNTILL SOUND CHANGES)
6. WALK TO FRONT AND TURN IGNITION KEY TO OFF POSITION AND REMOVE KEY